 


RF RGBW Wall Mounted Controller

 


Important: Read All Instructions Prior to Installation


Function introduction

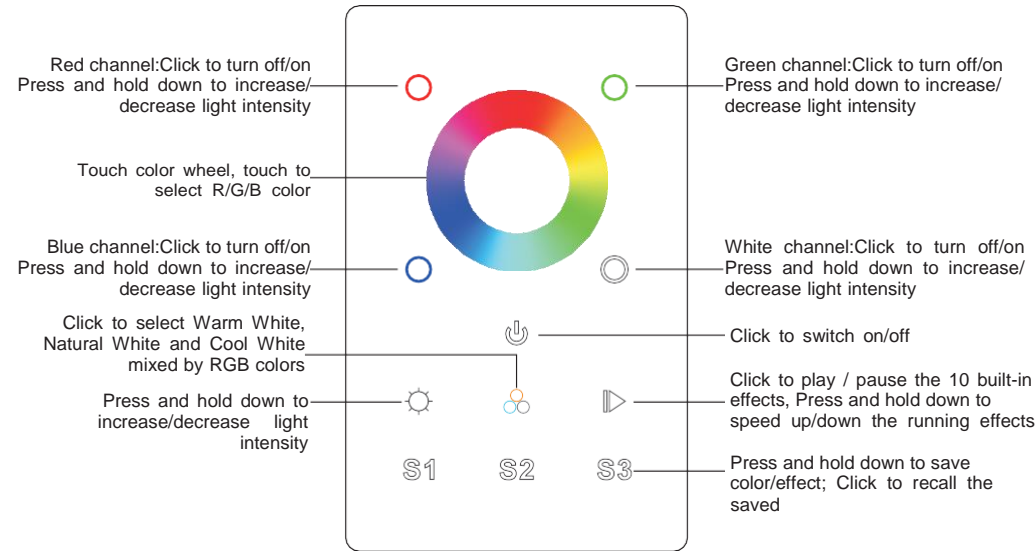

Front side

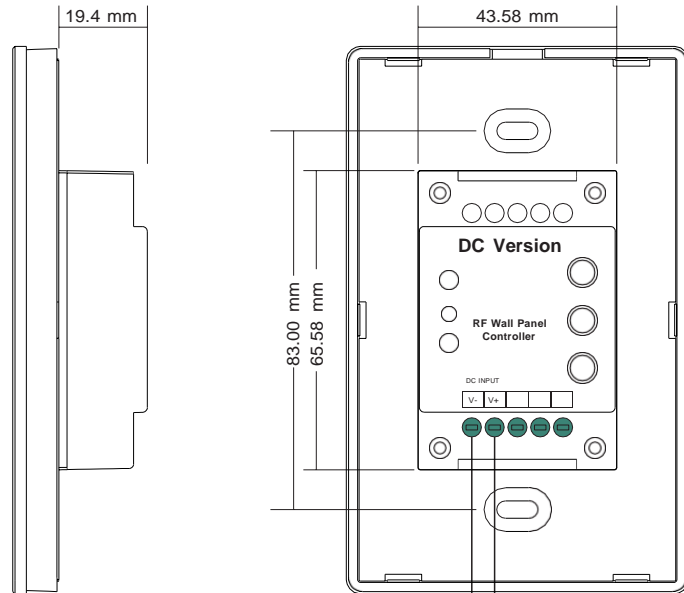

Back side

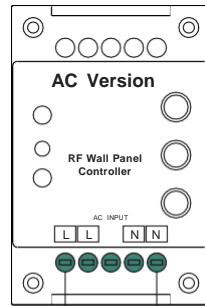 

AC Power input

Product Data

| | DC Version | AC Version |
|-----------------------|---------------|---------------|
| Output Signal | RF signal | RF signal |
| Power Supply | 12-24VDC | 100-240VAC |
| Power consumption | 200 mA | 15 mA |
| Operating temperature | 0-40°C | 0-40°C |
| Relative humidity | 8% to 80% | 8% to 80% |
| Dimensions | 75x120x29.1mm | 75x120x29.1mm |

 
 
- Touch sensitive
- Glass interface(white & black)
- Compatible with all universal series RF receivers
- Control RGBW color
- Control 1 zone/area
- Waterproof grade: IP20

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.


Wiring diagram

DC Version

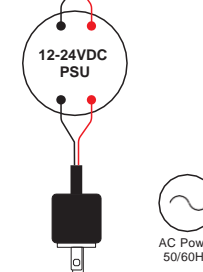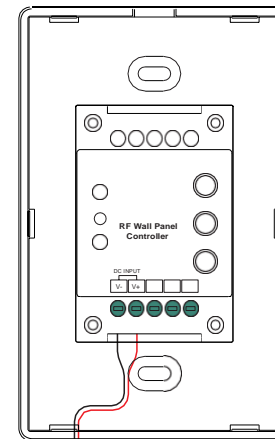

AC 100-240V

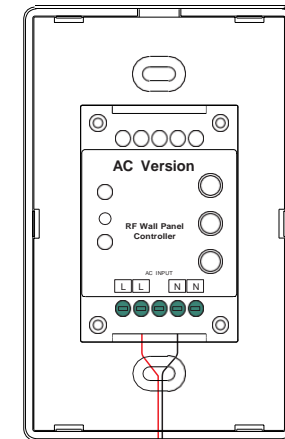 

AC Version



AC 100-240V

Operation

Pair with RF receivers:

Click  button of the wall panel controller → Click "Learning Key" on RF receiver → Touch the color wheel  of the wall controller → LED lights connected with the receiver will flicker once means the receiver is paired with the wall remote controller

How to delete the pairing:

Press and hold down "Learning Key" on the receiver for over 3 seconds until connected LED lights flicker twice, which means the pairing is deleted successfully.

Installation

